



endace
accelerated

DAG 8.1X Card User Guide

EDM01-26



Protection Against Harmful Interference

When present on equipment this manual pertains to, the statement "This device complies with part 15 of the FCC rules" specifies the equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission [FCC] Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

Extra Components and Materials

The product that this manual pertains to may include extra components and materials that are not essential to its basic operation, but are necessary to ensure compliance to the product standards required by the United States Federal Communications Commission, and the European EMC Directive. Modification or removal of these components and/or materials, is liable to cause non compliance to these standards, and in doing so invalidate the user's right to operate this equipment in a Class A industrial environment.

Disclaimer

Whilst every effort has been made to ensure accuracy, neither Endace Technology Limited nor any employee of the company, shall be liable on any ground whatsoever to any party in respect of decisions or actions they may make as a result of using this information.

Endace Technology Limited has taken great effort to verify the accuracy of this manual, but nothing herein should be construed as a warranty and Endace shall not be liable for technical or editorial errors or omissions contained herein.

In accordance with the Endace Technology Limited policy of continuing development, the information contained herein is subject to change without notice.

Website

<http://www.endace.com>

Copyright 2007 Endace Technology Ltd. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the Endace Technology Limited.

Endace, the Endace logo, Endace Accelerated, DAG, NinjaBox and NinjaProbe are trademarks or registered trademarks in New Zealand, or other countries, of Endace Technology Limited. Applied Watch and the Applied Watch logo are registered trademarks of Applied Watch Technologies LLC in the USA. All other product or service names are the property of their respective owners. Product and company names used are for identification purposes only and such use does not imply any agreement between Endace and any named company, or any sponsorship or endorsement by any named company.

Use of the Endace products described in this document is subject to the Endace Terms of Trade and the Endace End User License Agreement (EULA).

Contents

| | |
|---|-----------|
| Introduction | 1 |
| Overview | 1 |
| Card Features | 1 |
| Purpose of this User Guide | 1 |
| System Requirements | 2 |
| General | 2 |
| Operating System | 2 |
| Other Systems | 2 |
| Card Description | 3 |
| Battery removal – don't do it! | 3 |
| Card Architecture | 4 |
| Line Types | 5 |
| Supported Line Types | 5 |
| Installation | 7 |
| Introduction | 7 |
| DAG Software package | 7 |
| Inserting the DAG Card | 7 |
| Port Connectors | 8 |
| Pluggable Optical Transceivers | 8 |
| Overview | 8 |
| Optical modules | 9 |
| Power Input | 9 |
| Splitter Losses | 9 |
| Configuring the DAG card | 10 |
| Introduction | 10 |
| Before configuring the DAG card | 10 |
| Firmware images | 10 |
| Getting a link up signal | 10 |
| Setting up the FPGA | 11 |
| Programming the FPGA | 11 |
| dagrom | 12 |
| Loading new firmware images onto a DAG Card | 13 |
| Preparing the DAG card for use | 13 |
| Configuring the DAG card | 14 |
| Display Current Configuration | 14 |
| dagconfig tokens explained | 15 |
| dagconfig options | 19 |
| Viewing the DAG card status | 20 |
| Interface Status | 20 |
| Counters | 20 |
| Universal counters | 21 |
| Using your DAG card to capture data | 23 |
| Introduction | 23 |
| Basic data capture | 23 |
| Starting a capture session | 23 |
| dagsnap | 24 |
| Capturing data at high speed | 25 |
| Viewing captured data | 26 |
| dagbits | 26 |
| Converting captured data | 28 |
| Dagconvert | 29 |
| Using third party applications | 30 |

| | |
|---|----|
| Synchronizing Clock Time | 31 |
| Overview | 31 |
| DUCK Configuration..... | 31 |
| Common Synchronization | 31 |
| Network Time Protocol..... | 32 |
| Timestamps..... | 33 |
| Example | 33 |
| Dagclock..... | 34 |
| Dagclock Statistics reset..... | 35 |
| Dagclock output explained | 36 |
| Card with Reference | 38 |
| Overview | 38 |
| Pulse Signal from External Source | 38 |
| Connecting the Time Distribution Server | 38 |
| Testing the Signal | 38 |
| Single Card No Reference | 39 |
| Two Cards No Reference | 40 |
| Overview | 40 |
| Synchronizing with Each Other | 40 |
| Synchronizing with Host..... | 41 |
| Connector Pin-outs | 42 |
| Overview | 42 |
| Pin Assignments | 42 |
| Data Formats | 43 |
| Overview | 43 |
| Generic ERF Header | 44 |
| ERF 2. TYPE_ETH..... | 46 |
| Extension Headers (EH)..... | 47 |
| Introduction | 47 |
| Troubleshooting | 49 |
| Reporting Problems | 49 |
| Version History | 51 |

Overview

The Endace DAG 8.1X card provides the means to transfer data at the full speed of the network into the memory of the host computer, with zero packet loss in even worst-case conditions. Further, unlike a Network Interface Card (NIC), Endace products actively manage the movement of network data into memory while only consuming a minimal amount of the host computer's resources. The full attention of the CPU remains focused on the analysis of incoming data without a constant stream of interruptions as new packets arrive from the network. For a busy network link, this feature has a turbo-charging effect similar to that of adding a second CPU to the system.

The DAG 8.1X card is a single port, PCIe card that allows capture of data. It is designed for use with optical interface. It provides capture of 10 Gigabit Ethernet traffic with precision timestamping capability.

Card Features

The following features are available on this DAG card. **Note:** Different firmware images may be required. Not all features are available on each firmware image. For further information on which feature is available in what firmware image, see [Firmware images](#) (page 10).

- 10 Gigabit Ethernet

Purpose of this User Guide

The purpose of this User Guide is to provide you with an understanding of the DAG 8.1X card architecture, functionality and to guide you through the following:

- Installing the card and associated software and firmware
- Configuring the card for your specific network requirements
- Running a data capture session
- Synchronizing clock time
- Data formats

You can also find additional information relating to functions and features of the DAG 8.1X card in the following documents which are available from the Support section of the Endace website at <http://www.endace.com>:

- *EDM04-01 DAG Software Installation Guide*
- *EDM04-04 dagfwddemo User Guide*
- *EDM04-06 Dagen User Guide*
- *EDM04-08 Configuration and Status API Programming Guide*
- *EDM04-19 DAG Programming Guide*
- *EDM05-01 Time Distribution Server User Guide*
- *EDM11-01 ERF types*
- *PN01-13 DAG Card Quick Start Guide*

This User Guide and the *EDM04-01 DAG Software Installation Guide* are also available in PDF format on the installation CD shipped with your DAG 8.1X card.

System Requirements

General

The minimum system requirements for the DAG 8.1X card are:

- A computer, with at least a Intel Xeon 1.8GHz or faster and a minimum of 1GB RAM.
- At least one free PCI-e slot supporting 8-lane operation.
- Software distribution requires 60MB free space.
- For details of the supported operating systems, see one of the following documents:
 - *EDM04-01 DAG Software Installation Guide*
 - Current release notes - See the Documentation CD or the Endace support website at <https://www.endace.com/support>.

Operating System


This document assumes you are installing the DAG 8.1X card in a computer which already has an operating system installed. To install refer to *EDM04-01 DAG Software Installation Guide*. All related documentation is included on the CD shipped with the DAG 8.1X card.

Other Systems

For advice on using an operating system that is substantially different from any of those specified above, please contact Endace Customer Support at support@endace.com.

Card Description

The DAG 8.1X provides one full-duplex optical 10 Gigabit interface. It is capable of capturing at full line rate Ethernet traffic. The 8-lane PCIe bus enables a maximum 10 Gigabit per second throughput.

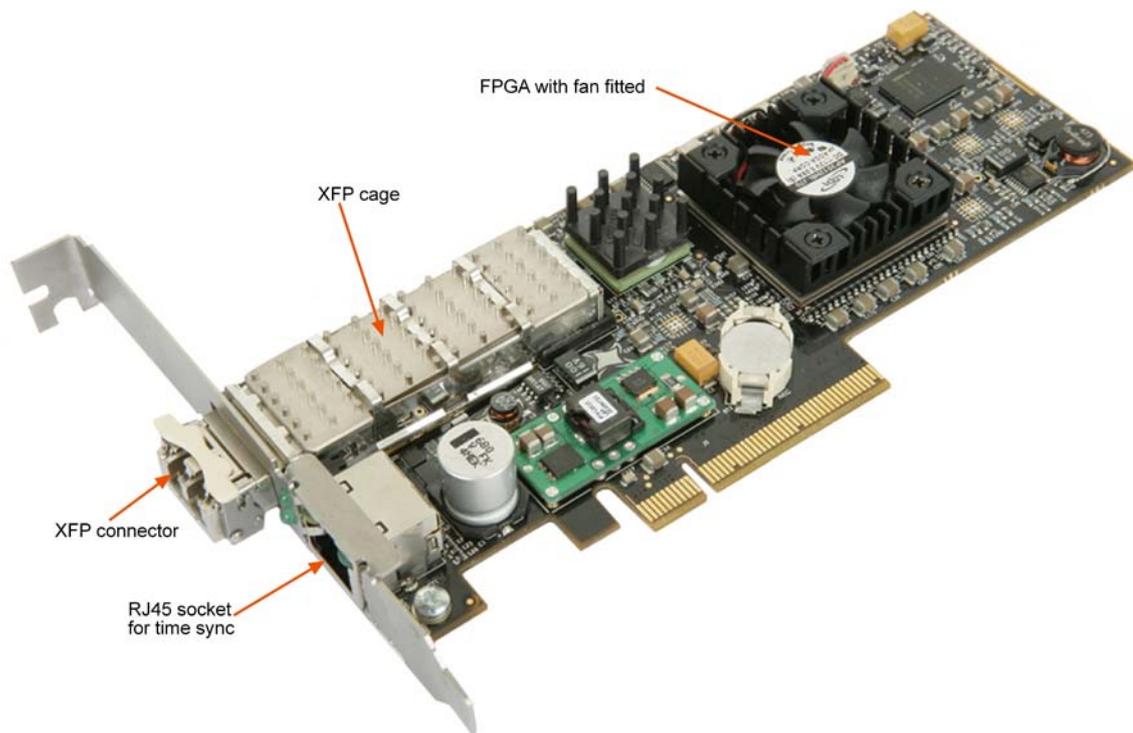

The key features of the card are:

- User configurable single channel network monitoring for 10GBase-LAN networks.
- 100% capture into host memory at full line rate.
- Header only or variable length packet capture.
- 10 Gigabit Small Form Factor (XFP) pluggable full duplex network interface.
- Conditioned clock with one PPS input and local synchronization capability.
- 8 Lane PCIe bus interface.

Battery removal – don't do it!

Removing the battery from a DAG card voids your warranty.

Removing the battery from a DAG card will cause the loss of encryption key used to decode the DAG card's firmware. Once the encryption key is lost the DAG card must be returned to Endace for reprogramming.

The battery in this product is expected to last a minimum of 10 years.

Caution

Risk of explosion if the battery is replaced by an incorrect type.
Dispose of used batteries carefully.

Card Architecture


Serial optical data received by the XFP optical interface flows directly in to the Field Programmable Gate Array (FPGA).

The FPGA contains the packet record processor and the DAG Universal Clock Kit (DUCK) timestamp engine. The DUCK provides high resolution per-packet timestamps which can be accurately synchronized.

Note: For further information on the DUCK and time synchronization see to [Synchronizing Clock Time](#) (page 31) later in this user guide.

Because of component close association, packets are time-stamped accurately. Time stamped records are stored in an internal FIFO memory before transmission to the host.

The following diagram shows the card's major components and the flow of data:

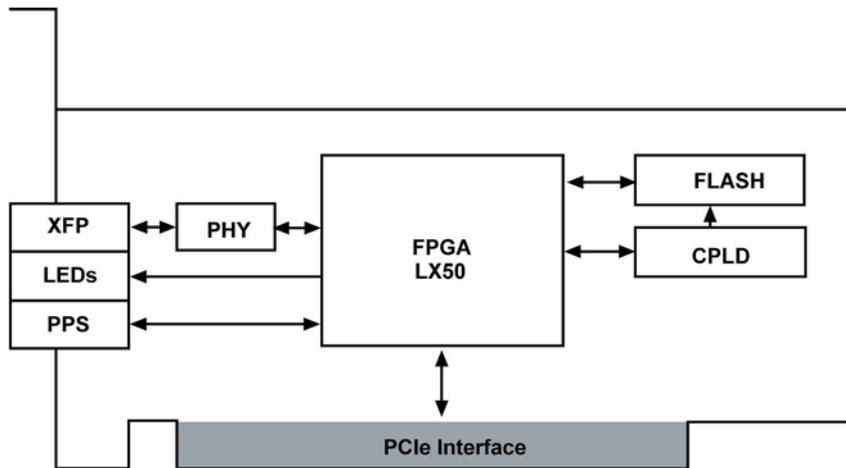

Line Types

It is important that you understand the physical characteristics of the network to which you want to connect. If your configuration settings do not match your network, the DAG 8.1X card will not function as expected.

There are various Ethernet line speeds and corresponding protocols which are identified using the IEEE naming convention. Each line speed has a set of requirements associated with it relating to the type of cable, maximum allowable distance, etc.

Note: If you are unsure about which of the options listed below to apply to your network, please contact your Network Administrator for further information.

Supported Line Types

The line types supported by the DAG 8.1X card are described below.

| Type | Description |
|------------|---|
| 10GBase-SR | 10 Gigabit per second over Ethernet single mode fiber optic cable with short wavelength laser driver (850nm). |
| 10GBase-LR | 10 Gigabit per second over Ethernet single mode fiber optic cable with long wavelength laser driver (1310nm). |
| 10GBase ER | 10 Gigabit per second over Ethernet single mode fiber optic cable with long wavelength laser driver (1550nm). |

Note: For more detailed information regarding Ethernet line types and speeds, please refer to IEEE Standard 802.3 available from the IEEE website at www.ieee.org.

Introduction

The DAG 8.1X card operates on an 8 lane PCIe bus and can be installed in any free 8 lane PCIe slot.

The PCIe bus allows multiple DAG cards to be installed without affecting the bandwidth used by each DAG 8.1X card.

Full 10 Gigabit per second performance can only be achieved using an 8-lane PCIe slot.

DAG Software package


The latest DAG Software package must be installed before you install the DAG 8.1X card itself. See *EDM04-01 DAG Software Installation Guide*, which is included on the CD shipped with the DAG 8.1X card.

Inserting the DAG Card

Caution:

It is very important to protect both the computer and the DAG 8.1X card from damage by electro-static discharge (ESD). Failure to do so could cause damage to components and subsequently cause the card to partially or completely fail.


1. Turn power to the computer OFF.
2. Remove the PCIe bus slot screw and cover.
3. Using an approved ESD protection device attach the end with the strap to your wrist and pull or clip firmly so there is firm contact with your wrist.
4. Securely attach the clip on the other end of the strap to a solid metal area on the computer chassis as shown below.

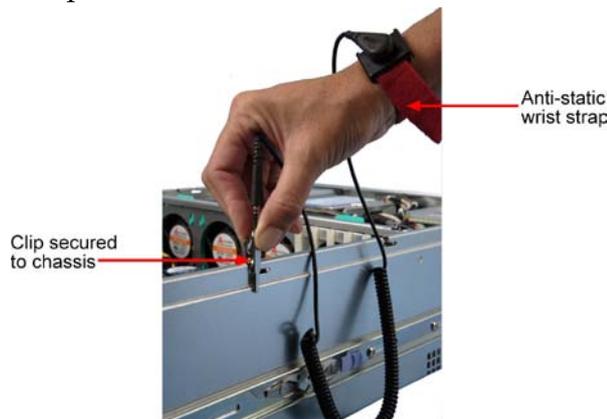

5. Insert the DAG 8.1X card into PCIe bus slot ensuring it is firmly seated.
6. If this DAG card requires an external power supply, complete the following steps:
 - a. Connect the supplied (or equivalent) power cable to the external power connector on the DAG card.
 - b. Connect the cable to the appropriate power connector on your server's power supply unit.
7. Check the free end of the card fits securely into the card-end bracket that supports the weight of the card.
8. Secure the card with the bus slot cover screw.
9. Turn power to the computer ON.
10. Ensure the blue (FPGA successfully programmed) LED on the DAG card illuminates.

Port Connectors

The DAG 8.1X has a single 10 Gigabit Small Form Factor Pluggable (XFP) socket connector consisting of an optical fiber transmitter and receiver as shown below:

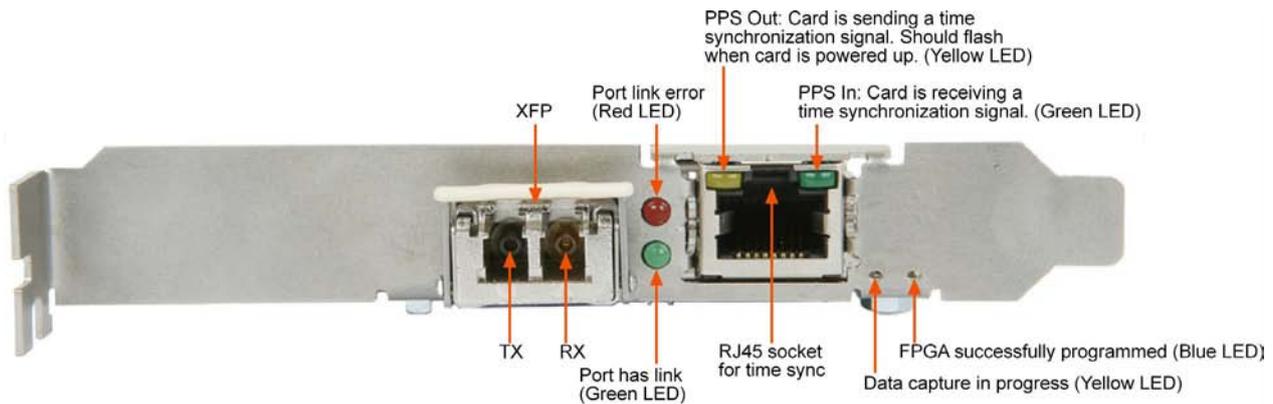

There is an 8-pin RJ-45 socket located below the XFP connector which is available for connection to an external time synchronization source.

Caution:

Never connect an Ethernet network or telephone line to the RJ-45 sockets.

Pluggable Optical Transceivers

Overview

The DAG 8.1X card uses an industry standard 10 Gigabit Small Form-Factor Pluggable (XFP) optical transceiver.

The transceiver consists of two parts:

- Mechanical chassis attached to the circuit board
- Transceiver unit which may be inserted into the chassis

Note: You must select the correct transceiver type to match the optical parameters of the network to which you want to connect. Configuring the card with the wrong transceiver type may damage the card.

You can connect the transceiver to the network via LC-style optical connectors.

For further information on Pluggable Optical Transceivers, please refer to the Endace website at <http://www.endace.com>.

Optical modules

The optical power range depends on the particular XFP module that is fitted to the DAG 8.1X card. See following table for details.

Optical power is measured in dBm. This is decibels relative to 1 mW where 10 dB is equivalent to a factor of 10 in power. A negative optical power value indicates power that is less than 1 mW. The most sensitive devices can work at power levels down as low as -30dBm or 1 μ W.

The DAG 8.1X card optics power module specification is shown below:

| Product Number | Network Support | Receive Characteristics | | | | Transmit Characteristics | | | |
|-----------------|---|-------------------------|------|-------------------|-----|--------------------------|----------------|-----|--|
| | | Wavelength (nm) | | Sensitivity (dBm) | | Wavelength | Tx Power (dBm) | | |
| | | Min | Max | Min | Max | (nm) | Min | Max | |
| TXR-10G 850 MM | 10GBASE-LR Multimode | 840 | 860 | -11.1 | -1 | 850 | -7.3 | * | |
| TXR-10G 1310 SM | OC-192 (STM-64) & 10GBASE-LR/LW Single mode | 1290 | 1330 | -14.4 | 0.5 | 1310 | -6 | -1 | |
| TXR-10G 1550 SM | OC-192 (STM-64) & 10GBASE-ER/EW Single Mode | 1270 | 1600 | -16 | -1 | 1550 | -1 | 2 | |

Power Input

Note: The optical power input to the DAG card must be within the receiver's dynamic range. See the previous table for details. If it is slightly outside of this range it will cause an increased bit error rate. If it is significantly outside of this range the system will not be able to lock onto the signal.

When power is above the upper limit the optical receiver saturates and fails to function. When power is below the lower limit the bit error rate increases until the device is unable to obtain lock and fails. In extreme cases, excess power can damage the receiver.

When you set up the DAG card you should measure the optical power at the receiver and ensure that it is within the specified power range. If it is not, adjust the input power as follows:

- Insert an optical attenuator if power is too high, or
- Change the splitter ratio if power is too high or too low.

Splitter Losses

Splitters have the insertion losses either marked on their packaging or described in their accompanying documentation. General guidelines are:

- A 50:50 splitter will have an insertion loss of between 3 dB and 4 dB on each output
- 90:10 splitter will have losses of about 10 dB in the high loss output, and <2 dB in the low loss output

Note: Endace recommends that you do not use a combination of single mode and multi mode fibers and optics modules on the same link, as the quality of the received signal cannot be guaranteed.

If you have no choice but to mix single mode and multi mode you should be aware that a single mode input connected to a multi mode fiber will have some attenuation but may still be acceptable. However a multi mode input connected to a single mode fiber will likely have large and unpredictable losses.

Configuring the DAG card

Introduction

Configuring the DAG 8.1X card ready for capturing data requires the following steps:

- [Setting up the FPGA](#) (page 11)
- [Preparing the DAG card for use](#) (page 13)
- [Configuring the DAG Card](#) (page 14)
- [Viewing the DAG card statistics](#) (page 20)

Once the DAG 8.1X is configured you can start capturing data, see [Using your DAG card to capture data](#) (page 23) for details on capturing data.

Before configuring the DAG card

Before configuring the FPGA, you should ensure that:

- `dagmem` has been run and memory allocated to each installed DAG card.
- `dagload` has been run so that all DAG drivers have been installed.

Refer to the *Installing the drivers* section for the required Operating system in *EDM04-01 DAG Software Installation Guide* for the further details.

Firmware images

The following lists the features available on each firmware image available on this DAG card.

| FPGA image (Software version string) | 10 G Ethernet |
|---|---|
| dag81xpci_erf-xge.bit (dag81xpci_erf-xge_pci...) |  |

The software version strings are displayed in the `dagconfig` output and when using the `dagrom -x` command. They include a version number and creation date.

Getting a link up signal

Note: Applicable to DAG software version 3.2.0 and ERF images only.

The Link partner (for example SPAN port), in many cases, must receive a valid "link up" signal from the connected DAG card before it will start sending data to that DAG card. As the DAG 8.1X card has no transmit function, no signal can be sent to the Link partner.

Therefore you need to use the *FCL* (facility loopback) option on the DAG card to provide a valid Ethernet signal back to the link partner.

The `fcl` option reflects all received data back to the Link partner therefore giving the Link partner a valid "link up" signal. Once this data is received by the Link partner it can be discarded.

Setting up the FPGA

All DAG cards have at least one Field-Programmable Gate Array (FPGA). The FPGA contains the firmware for the DAG card. The firmware defines how the DAG card operates when capturing data and contains the specific configuration.

Note: Some DAG cards have multiple FPGA's.

For each FPGA there are two firmware images:

- a factory image - contains fixed basic functionality for operating the DAG card.
- a user image - contains an upgradable version of the DAG card firmware. Additional functionality for the DAG card is available via the user image. Different user images may be available with different functionality, i.e. TERF, DSM etc.

Firmware images are loaded into DAG card flash ROM in the factory. The image is programmed into the FPGA each time the DAG card is powered up. The user image can then be programmed into the FPGA either manually or via a script.

Programming the FPGA

Before configuring the DAG card for capture, you must load and program the DAG card with the appropriate FPGA image.

Note: For information about the `dagrom` options, see [dagrom](#) (page 12).

Load the appropriate FPGA image using `dagrom` as follows:

```
dagrom -d0 -rvp -f dag81pci-erf-xge.bit
```

(where "0" is the device number of the DAG card you wish to capture data from). The filename of the FPGA image may differ from the above depending on the version required.

Note: For PCB's rev A and B please contact Endace for the appropriate firmware image.

dagrom

dagrom is a software utility that enables you to configure the FPGA on Endace DAG cards. The following is a list of options available in dagrom.

| Option | Description |
|--|--|
| -a,--alternate-half | Use alternate (stable) half. [Default is current half.] Factory / User. |
| -A,--entire-rom | Entire ROM. [Default is current half only.] |
| -b,--swid-rom-check | Check if there is a SWID on the ROM. |
| -c,--cpu-region <region> | Access CPU region: c=copro, b=boot, k=kernel, f=filesystem. |
| --continue | Continue on erase error. |
| -d,--device <device> | DAG device to use. |
| -e,--erase | Erase ROM. [Default is read.] |
| -F,--disable-cfi-fast | Disable fast program option for CFI mode. |
| -f,--file <filename> | File to be read when programming ROM. There are multiple FGPA images per DAG card, covering the different versions, ERF, TERF DSM etc. |
| --force | Force loading firmware. Dangerous. |
| -g,--rom-number <rom> | Access specified ROM controller. [Default is 0.] |
| -h,--help -?,--usage | This page. |
| -i,--halt-ixp | Halt the embedded IXP Processor (DAG 7.1S only). |
| --image-table-fpga <image table fpga> | Specify the Power On image selection table FPGA number |
| --image-table-image <image table image> | Specify the Power On image selection table Image number |
| -j,--swid-rom-check-key <key> | Check the ROM SWID key with the one supplied. |
| -l,--hold-bus | Hold PBI bus from XScale (DAG 3.7T only). |
| -m,--swid-key <key> | Hexadecimal key for writing the Software ID (aka SWID). |
| -o,--swid-rom-read | Read SWID from ROM. |
| -p,--program-current | Program current User 1 Xilinx image into FPGA. |
| -q,--image-number <image number> | Specify the image number to write or to program the card.[0 - 3]. 0 factory image, 1 user image 1, 2 user image 2, 3 user image 3. (7.5G2/G4 only) |
| --swid-write <swid> | Write given SWID. The key must be supplied with the -m option, requires a valid running XScale ROM Image. (3.7T, 3.7D, 3.8S and 7.1S only) |
| -r,--reprogram | Reprogram ROM (may imply erase and write). |
| --reset-method <reprogram method> | Specify the method to reprogram the card.[1.Ringo 2.George 3.Dave] |
| -s,--swid-rom-write <swid> | Write given SWID to ROM. The key must be supplied with the -m option. |
| -t,--swid-read-bytes <bytes> | Read <bytes> of SWID, requires a valid running XScale ROM image (3.7T only) |
| -u,--swid-erase | Erase SWID from ROM. |
| --unknown | Force loading firmware. Dangerous. |
| -v,--verbose | Increase verbosity. |
| -V,--version | Display version information. |
| -w,--write | Write ROM (implies erase). [Default is read.] |
| --write-out <filename> | Write the contents of the ROM to a file. |
| -x,--list-revisions | Display Xilinx revision strings (the default if no arguments are given). |
| -y,--verify | Verify write to ROM. |
| -z,--zero | Zero ROM. [Default is read.] |

All commands apply to the current image portion of the ROM, unless one of the options -a, -A, -c is specified.

Note: Not all commands are supported by all DAG cards.

To view the FPGA image revision strings, type the following:

```
dagrom -d0 -x
```

Output:

```
user:          dag81xpci_erf-xge_v2_2 5vlx50tff1136 2008/01/11 15:48:13 (active)
factory: dag81xpci_erf-xge_v2_2 5vlx50tff1136 2008/01/11 15:48:13
```

Loading new firmware images onto a DAG Card

New DAG card FPGA images are released regularly by Endace as part of software packages. They can be downloaded from the Endace website at <https://www.endace.com/support>.

Endace recommends you use the `dagrom -r` command when loading images from the computer to the ROM on the DAG card.

The `-r` option invokes a comparison of images on the computer and in the DAG card. Newer versions are automatically loaded onto the DAG card and programmed into the FPGA. See [dagrom](#) (page 12). This eliminates unnecessary reprogramming of the ROM and extends its life.

Preparing the DAG card for use

Before configuring the DAG 8.1X card you must run the following `dagconfig` command to set the default parameters in the DAG card. This ensures the DAG 8.1X card functions correctly once you begin capturing data.

Note: Ensure you run this command each time the FPGA is reprogrammed.

```
dagconfig -d0 default
```

where "0" is the device number of the DAG card you wish to capture data from. The current DAG 8.1X configuration displays and the firmware is verified as correctly loaded. See [dagconfig](#) (page 19) for more information.

Configuring the DAG card

Display Current Configuration

Once you have loaded the FPGA image you should run the `dagconfig` tool without arguments to display the current card configuration and verify the firmware has been loaded correctly.

To display the default configuration for the first card, use:

```
dagconfig -d0
```

where "0" is the device number of the DAG card you wish to capture data from.

A description of available commands follows.

Note: Not all commands displayed in the following diagram.

Ethernet

```
Firmware: dag81xpci_erf-xge_v2_2 5vlx50tff1136 2008/01/11
15:48:13 (user)
Serial : 234789
MAC Address A : 00:00:00:00:00:00
Port A: noeql nofcl slave IDELAY=0 noreset tx_crc
GPP:
varlen slen=9616 align64
Port A: drop_count = 0
PCI Burst Manager:
16Gbs, 8lane
buffer_size=128 rx_streams=1 tx_streams=0 nodrop
Memory Streams: mem=64:0
```

Sets (eq) or unsets (noeq) equipment loopback.
Note: eq loops back to the PCI bus.

Sets (fcl) or unsets (nofcl) facility loopback.
Note: fcl loops back to the line

Records will be generated with 64-bit alignment. This is not a configurable option.

Number of packets dropped during current capture session.

Total memory (in MB) available for allocation to this card

Memory currently allocated (in MB) to rx stream (64MB) and tx stream (0MB)

dagconfig tokens explained

align64

Sets the packets to be all generated as multiples of 8 bytes, 64-bit aligned, (`align64`) before being received by the host. Not a configurable option.

buffer_size

The `buffer_size=nMB` indicates that a total of n MB of memory have been allocated to the DAG card in total. Memory allocation occurs when the `dagmem` driver is loaded at boot time. See *EDM04-01 DAG Software Installation Guide* for details on how to allocate memory.

crcstrip/nocrcstrip

Don't include CRC in ERF record and wlen count.

Example

```
dagconfig crcstrip
dagconfig nocrcstrip
```

default

The `default` command initializes the DAG card configuration and sets all settings to operations values. The command also resets the DAG card configuration back to its default state.

Example

```
dagconfig default
```

drop_count

Note: The `drop/nodrop` setting for the DAG card determines where the packets are being dropped.

Port/GPP (no drop)

The number of packets dropped during current capture session on this port. Resets to 0 when `dagconfig reset` is run.

Stream/Burst manager (drop)

The number of packets dropped during current capture session on the individual stream. Resets to 0 when a capture is started.

drop/nodrop

Determines if the DAG card's memory holes are de-coupled.

In `drop` mode, the memory holes are de-coupled. If the data rate on one memory hole slows, the data rate on any other memory holes is not affected. The dropping of packets occurs at the individual stream's burst manager.

In `nodrop` mode, the memory holes are coupled. The speed of the slowest memory hole determines the overall speed of the data rate. The dropping of packets occurs at the port.

Example

```
dagconfig drop
dagconfig nodrop
```

enable/disable

Sets whether this DAG card captures data on the defined port (a or b).

Note: DAG ports are enabled by default. You do not need to use `dagconfig` to enable the card in order to begin capture unless you have previously disabled it.

Example

```
dagconfig -d0 enablea
dagconfig -d0 disablea
dagconfig -d0 enableb
dagconfig -d0 disableb
```

where "0" is the device number of the DAG card you wish to capture data from

Note: On some firmware images changes to this option may not take effect.

eql/noeq1

Sets or unsets equipment loopback. For testing set to `eq1` mode and normal operation set to `noeq1` mode.

Note: `eq1` mode loops transmit data from the host back to the PCIe bus.

Example

```
dagconfig eql
dagconfig noeq1
```

eth

Sets framer into ETH receive mode. Image dependent - only operates in Ethernet images

Example

```
dagconfig eth
```

fcl/nofcl

Note: Sets or unsets Facility loop back. For testing set to `fcl` mode and normal operation set to `nofcl` mode.

FCL retransmits the data received and also send it to the host.

Example

```
dagconfig fcl
dagconfig nofcl
```

idelay=x

IDELAY Tap Counter Value

laser/nolaser

Enables/disables the transmit laser on for the optical transceivers.

Example

```
dagconfig laser
dagconfig nolaser
```

lock/nolock

Read only. Indicates that the card is receiving a signal at the appropriate frequency (`lock`), or there is no signal being received (`nolock`).

master/slave

Defines whether the data transmitted is clocked with the recovered clock from the input (slave) or if it uses the synthesized reference clock on the card (Master).

Setting required for SONET images only.

mem

You can split the DAG card's allocated memory between the receive and transmit stream buffers to suit your own requirements. The split is displayed as a ratio as shown below:

```
mem=X:Y
```

where:

x is the memory allocated in MB to the rx stream

y is the memory allocated in MB to the tx stream.

If there are multiple rx or tx streams memory can be allocated to each stream:

```
mem=X:Y:X:Y:X:Y
```

[Buffer_size](#) (page 15) and [rx and tx Streams](#) (page 17) are related to mem.

Example

You can split 128MB of memory evenly between the tx and rx streams using:

```
dagconfig -d0 mem=64:64
```

Note: You can not change the stream memory allocations while packet capture or transmission is in progress.

overlap/nooverlap

Configures the rx and tx memory hole to be overlapped. This enables in-line forwarding without copying the data across the memory holes.

Example

```
dagconfig overlap
dagconfig nooverlap
```

Note: This option is only applicable on firmware images containing TX.

reset/noreset

Resets the images to the default state. Clears the Port drop counters. All settings done before are kept in place.

Example

```
dagconfig reset
dagconfig noreset
```

rx and tx Streams

Indicates the number of rx and tx streams are available on the DAG card. Not configurable.

Stream information relates to the setting of [mem](#) (page 17).

slen

Before you begin to capture data you can set the size that you want the captured packets to be. You can do this using the `dagconfig` tool to define the packet snaplength (`slen`).

Note: The snaplength value must be a multiple of 8 and in the range 48 to 9600 per card inclusive.

By default, `slen` which is the portion of the packet that you want to capture is set to 48 per card. This means that only the first 48 bytes of each packet will be captured.

If for example you want to capture only the IP header of each packet you may want to set the length to a different value. Alternatively if you want to ensure you capture the whole packet you can set the length to a larger value.

Example

Setting up a DAG 8.1X card with a snap length of 200 bytes:

```
dagconfig -d0 slen=200
```

Note: The ERF header is not included in the `slen` value. Therefore a `slen` of 48 will produce a 64-byte capture record made up of 48 bytes plus the number of bytes in the ERF header.

However because the Ethernet record headers occupy 18 bytes instead of the standard 16 bytes, any payload captured will always be 2 bytes less than the `slen` value i.e. a `slen` of 48 will produce a 64-byte record made up of 18 bytes of header and 46 bytes of payload.

For more information on Ethernet records, see [Data Formats](#) (page 43) later in this user guide.

sfppwr/nosfppwr

Turns on (`sfppwr`) or OFF (`nosfppwr`) the module power for transmit.

Example

```
dagconfig sfppwr
dagconfig nosfppwr
```

tx_crc

Enables the `crc(fcs)` in the transmitted packets CRC(FCS). Ethernet only.

Example

```
dagconfig tx_crc
dagconfig notx_crc
```

varlen

The DAG 8.1X uses variable length capture. This allows you to capture the whole packet, providing its size is less than the `slen` value. Therefore to be effective you should set the `slen` value to the largest number of bytes that a captured packet is likely to contain.

Any packet that is larger than the `slen` value will be truncated to that size. Any packet that is smaller than the `slen` value will be captured at its actual size therefore producing a shorter record which save bandwidth and storage space.

The example below shows a configuration for variable length full packet capture:

```
dagconfig -d0 slen=9600
```

Version information

Details the following information about the connected DAG card:

- Firmware image programmed in the FPGA
- The DAG card serial number
- The MAC address(s) of the DAG card's ports (ethernet cards only).

dagconfig options

`dagconfig` is a software utility used to configure and display statistics.

By default all commands, unless otherwise defined, run on device 0 (`-d0`). Commands only apply to one DAG card.

The following is a list options available in `dagconfig`. Not all options listed are applicable to all cards.

| Options: | Description |
|---|--|
| <code>-1,--porta</code> | Port A only (default all). Multi-port cards only. |
| <code>-2,--portb</code> | Port B only (default all). Multi-port cards only. |
| <code>-3,--portc</code> | Port C only (default all). Four-port cards only. |
| <code>-4,--portd</code> | Port D only (default all). Four-port cards only. |
| <code>--porte to --portp</code> | As above, for extra ports on the 3.7T DAG card. |
| <code>-c,--concfg <conncfg></code> | Connection configuration. Used by the DAG 7.1S only. |
| <code>-C,--counters</code> | Outputs the counters. Verbosity levels from 0=(basic / default) to 3=(full). |
| <code>-d,--device <device></code> | DAG device to use. Default is <code>d0</code> . |
| <code>-e,--extended</code> | Displays the current extended statistics (non boolean and image dependant). Verbosity levels from 0=(basic / default) to 3=(full). Note: Some images may not contain extended statistics. |
| <code>-G,--getattribute <getattribute></code> | Gets individual attributes by attribute name. Use in conjunction with the <code>--porta</code> or <code>--portb</code> options to get individual only multi-port cards. |
| <code>-h,--help</code> | Displays the MAN pages. The information displayed is dynamically based on the DAG card and does not work correctly when there is no DAG card in the system. Note: There are a few commands that display even though they are not applicable. |
| <code>-i,--interval <seconds></code> | Interval to repeat in seconds. |
| <code>-m,--hmon</code> | Outputs the hardware monitor information. |
| <code>-n,--voltages</code> | Outputs the DAG card voltage monitor information. |
| <code>-S,--setattribute <setattribute></code> | Sets individual attributes by attribute name. Use in conjunction with the <code>--porta</code> or <code>--portb</code> options to get individual only multi-port cards. |
| <code>-s,--statistics</code> | Outputs the statistics for the DAG card. Verbosity levels from 0=(basic / default) to 3=(full). |
| <code>-T,--tree</code> | Outputs the supported Configuration and Status attributes and components with the description and name. Using the <code>-v2</code> verbosity level also outputs all components and attribute codes. Verbosity levels from 0=(basic / default) to 3=(full). |
| <code>-t,--txstats</code> | Outputs the transmit statistics for the DAG card. Where applicable. |
| <code>-u, --ucounters</code> | Outputs the universal counters for the DAG card. Where applicable. |
| <code>-v,--verbose <level></code> | Sets the verbosity level, from 0 (basic) to 3 (full). |
| <code>-V,--version</code> | Display the DAG card version information. |

Note: For cards with more than 2 ports you can select the required port using: `-(portnumber)` or `--(portletter)`.

Viewing the DAG card status

Interface Status

When you have configured the card according to your specific requirements you can view the interface statistics to check the status of each of the links using:

```
dagconfig -d0 -s
```

For more information see `dagconfig` (page 19).

There are multiple printout levels. The statistics displayed below are printout level 0.

Example outputs are shown below:

Note: “1” indicates the condition is present on the link “0” indicates the condition is not present on the link.

Ethernet

| Port | los | TXlockerror | lock | tx_fault | rx_fault | link |
|------|-----|-------------|------|----------|----------|------|
| A | 0 | 0 | 0 | 0 | 1 | 0 |

A definition of each of the Ethernet status conditions is described below:

| Condition | Definition |
|-------------|---|
| Link | The link is fully validated |
| Lock | Card is locked to the incoming signal and can capture data. |
| Lof | Loss of frame. Indicates oof has been asserted for more than 3 ms. |
| Los | Loss of signal. indicates there is either no signal at the receiver or the optical signal strength is too low to be recognized. |
| Port | Indicates the port the status conditions apply to. |
| rx_fault | There is a receive fault |
| Rxlockerror | Lock error on receive. |
| tx_fault | There is a transmission fault |
| Txlockerror | Lock error on transmit. |

Counters

Extended statistics are also available: The following example shows the extended statistics.

```
dagconfig -C
```

For more information see `dagconfig` (page 19).

There are multiple printout levels. The statistics displayed below are printout level 0.

Note: “1” indicates the condition is present on the link “0” indicates the condition is not present on the link.

Ethernet

| Port | RX_Frame | RX_Byte | RX_err |
|------|----------|---------|--------|
| A | 0 | 0 | 0 |

A definition of each of the status conditions is described below:

| Condition | Definition |
|-----------|---|
| Port | Indicates the port to which the status conditions are applicable. |
| RX_frame | Number of RX frames received. |
| RX_bytes | Number of RX bytes received. |
| RX_errors | Number of RX errors received. |

Universal counters

The counters contain details of the number of frames and any errors. The counters are latch and clear so values indicate the amount of data since the last time the counters were read.

```
dagconfig -d0 -u
```

For more information see dagconfig (page 19).

Example outputs are shown below:

Ethernet

```

          Number of counters in this block
          Number of counter blocks on the card
**** Number of blocks: 1
Total number of counters: 3
Nb of counter(s) in Block ID "Eth_Frame_Rx": 3
  RX_Frame :      Port : 0 : value = 134
  RX_Byte  :      Port : 0 : value = 18903
  RX_err   :      Port : 0 : value = 0

```

Annotations:

- Number of counter blocks on the card (points to 1)
- Type of counters in the block (points to "Eth_Frame_Rx")
- Number of packets received from the line with errors (typically CRC errors) (points to RX_err)
- Number of payload bytes received from the line (points to RX_Byte)
- Number of packets received from the line (points to RX_Frame)
- Represents the port the data is from (points to Port : 0)
- Value of the counter (points to the values 134, 18903, and 0)

Using your DAG card to capture data

Introduction

This chapter describes how to complete the following operations for a DAG card:

- [Capturing data](#) (page 23)
- [Viewing captured data](#) (page 26)
- [Converting captured data](#) (page 28)
- [Using third party applications](#) (page 30)

Basic data capture

`dagsnap` is a software utility used to write to disk the raw data captured from a DAG card.

Data is collected in Extensible Record Format (ERF) which can then be viewed using `dagbits`, or converted to other formats using `dagconvert`.

When capturing high speed data Endace recommends you use `dagsnap`, see [Capturing data at high speed](#) (page 25).

For further information on the software utilities see:

- [dagsnap](#) (page 24)
- [dagbits](#) (page 26)
- [dagconvert](#) (page 29)

Starting a capture session

To start the capture session type the following at the prompt:

```
dagsnap -d0 -v -o tracefile
```

(where "0" is the device number of the DAG card you wish to capture data from)

Note: You can use the `-v` option to provide user information during a capture session although you may want to omit it for automated trace runs.

By default, `dagsnap` runs indefinitely. To stop, use `CTRL+C`. You can also configure `dagsnap` to run for a fixed time period then exit.

dagsnap

dagsnap is a data capture software utility.

The following is a list of the options available in dagsnap.

| Option | Description |
|------------------------------|---|
| -d DEVICE --device DEVICE | Use the DAG device referred to by DEVICE. Supported syntax includes 0, dag1, and /dev/dag3 to refer to DAG cards, and 0:2, dag1:0, and /dev/dag2:0 to refer to specific streams on cards. |
| -h, -? --help, --usage | Display usage (help) information. |
| -j | Maximize disk writing performance by only writing data to disk in chunks. This option may not be available on all operating systems. |
| -m NUM | Write at most NUM megabytes of data per call to the DAG API (default is 4 MiB). |
| -o FILE --fname FILE | Write the captured packets to FILE, in ERF format (default is standard output). |
| -s NUM --runtime NUM | Run for NUM seconds, then exit. |
| -v --verbose | Increase output verbosity. When dagsnap is run with this command three columns of data are reported every second. These columns contain <ol style="list-style-type: none"> 1. The cumulative total of data written out from the DAG card. 2. The buffer occupancy. Small values indicate no packet loss. 3. The rate at which data is currently being written. |
| -V, --version | Display version information. |
| -w, --wait SEC | Delay(wait) in seconds before capture and after. |

Capturing data at high speed

As the DAG 8.1X card captures packets from the network link, it writes a record for each packet into a large buffer in the host computer's main memory.

To avoid packet loss, the user application reading the record, such as `dagsnap`, must be able to read records out of the buffer as fast or faster than they arrive. If not the buffer will eventually fill and packet records will be lost.

If the user process is writing records to hard disk, it may be necessary to use a faster disk or disk array. If records are being processed in real-time, a faster host CPU may be required.

In Linux and Free BSD, when the computer buffer fills, the following message displays on the computer screen:

```
kernel: dagN: pbm safety net reached 0xNNNNNNNNN
```

The same message is also printed to log `/var/log/messages` file. In addition, when the computer buffer fills the "Data Capture" LED on the card will flash or flicker, or may go OFF completely.

In Windows no screen message displays to indicate when the buffer is full. Please contact Endace Customer Support at support@endace.com for further information on detecting buffer overflow and packet loss in Windows.

Detecting Packet Losses

Once the buffer fills, any new packets arriving will be discarded by the DAG 8.1X card until some data is read out of the buffer to create free space.

You can detect any such losses by observing the Loss Counter (`lctr` field) of the Extensible Record Format (ERF). See [Data Formats](#) (page 43) later in this User Guide for more information on the Endace ERF record format.

Increasing Buffer Size

You can increase the size of the host computer buffer to enable it to cope with bursts of high traffic load on the network link.

For information on increasing the buffer size, see [buffer_size](#) (page 15).

Viewing captured data

Data captured in ERF format can be viewed with `dagbits`. For further details on how to use `dagbits`, see [dagbits](#) (page 26).

Note: `dagbits` decodes and displays ERF header fields and packet contents are displayed as a Hex dump only. To decode higher level protocols, Endace recommends using a third party application, see [Using third party applications](#) (page 30).

Examples

Test live traffic on `dag0`, stream 0 for 60 seconds running the `lctr`, `flags` and `fcs` tests:

```
dagbits -vvc -d0:0 -s60 lctr flags fcs
```

To read a trace log file using `dagbits`:

```
dagbits -vvc print -f logname.log | less
```

To check for errors in the trace:

```
dagbits -vvc lctr flags fcs -f logname.log
```

If `dagbits` reaches the end of the traffic and prints its report then the ERF records were valid.

dagbits

`dagbits` is a software utility used to view and test ERF records. `dagbits` can receive data from either:

- directly from the DAG card (using the `-d` option), or
- a ERF data file created by `dagsnap`.

The following is a list options available in `dagbits`:

| Options | Description |
|------------------------------|--|
| -0 | ERF records contain no Link-Layer CRCs. |
| -16 | ERF records contain 16 bit Link-Layer CRCs (PoS). |
| -32 | ERF records contain 32 bit Link-Layer CRCs (PoS and Ethernet). |
| -a | Set legacy format to ATM (this is the default). |
| -b | Treat ERF timestamps as big-endian. |
| -c | Print real-time progress reports as <code>dagbits</code> captures traffic. This is a useful indicator that a test is running correctly. |
| -C NUM | Sets CRC correction factor for BTX test (0, 16 or 32 bits). |
| -d DEVICE --device DEVICE | Use the DAG device referred to by DEVICE. Supported syntax includes 0, <code>dag1</code> , and <code>/dev/dag3</code> to refer to DAG cards, and <code>0:2</code> , <code>dag1:1</code> , and <code>/dev/dag2:0</code> to refer to specific streams on cards. |
| -D NUM | Introduces a NUM nanosecond delay between processing each record. |
| -e | Set legacy format to Ethernet (default: ATM). |
| -E NUM | Halt operation after a maximum of NUM errors. This option prevents <code>dagbits</code> from creating extremely large output files when being redirected to a file. |
| -f FILE | Read captured data from FILE. |
| -h, -? --help, --usage | Display usage (help) information. |
| -i API | Use "API" interface for live DAG API capture. Possible options are: 0 DAG 2.4 legacy API interface [<code>dag_offset(3)</code>]. 1 DAG 2.5 API interface [<code>dag_advance_stream(3)</code>]. 2 DAG 2.5 API interface [<code>dag_rx_stream_next_record(3)</code>]. |
| -I | Assume the ERF contains color information in the pad and offset bytes (for Ethernet ERFs) or HDLC header bytes (for PoS ERFs) and display this information as a packet classification and destination memory buffer. |
| -j NUM | Set the threshold for the jitter test to NUM microseconds. |
| -m NUM | Print the first NUM errored records only, and then continue to count errors silently for the duration of the session. |

| | |
|------------------------|---|
| -n NUM | Expected number of packets to receive. Returns an error if the actual number is different. |
| -p | Set legacy format to PoS (default: ATM). |
| -P PARAMS | DAG 3.5S capture parameters. |
| -q | Quiet. This instructs <code>dagbits</code> to suppress summary information when terminating. Error messages are not affected by this option. |
| -r NUM | Set legacy format record lengths to NUM. |
| -R NUM | When used in conjunction with the <code>rlen</code> test, indicates the RLEN of ERF records to match against. NUM. |
| -s | Check for strictly monotonic (increasing) timestamps, rather than monotonic (non-decreasing). Affects the behavior of the <code>mono</code> test. With strict checking it is an error for consecutive timestamps to be equal; they must always increase. |
| -S NUM | Terminate <code>dagbits</code> after NUM seconds of capture. This option only makes sense when capturing packets from a DAG card (i.e. when used in conjunction with the <code>-d</code> flag). |
| -t NUM | Terminate <code>dagbits</code> if any ERF record type does not match NUM. |
| -U NUM | Process at most NUM records in one pass. This option enables the user to reduce the performance of <code>dagbits</code> for various purposes. See also <code>-D</code> . |
| -v -vv --verbose | Increase verbosity of <code>dagbits</code> . This option increase the amount of data displayed when printing an ERF record due to the <code>print</code> test or errors in other tests. <code>-v</code> will print payload contents, <code>-vv</code> will print payload contents and an accompanying ASCII dump of the packet payload. |
| -V, --version | Display version information. |
| -w | Instruct <code>dagbits</code> to treat all warnings as errors. |
| -W NUM | When used in conjunction with the <code>wlen</code> test, the wire length of ERF records must be exactly NUM bytes. |
| -z | Stop when no traffic is received for one second. |

`dagbits` takes several options that serve as parameters to particular tests. Available tests include monotonic time-stamp increment and frame checksum (FCS, aka CRC) validation. See the `dagbits help` for further details.

Converting captured data

`dagconvert` is the software utility that converts captured data from ERF format to Pcap (and other formats). Once in non ERF format the data can be read using [third party applications](#) (page 30).

`dagconvert` can also be used to capture data directly into pcap format.

Examples

To read from DAG card 0 and save to a file in ERF format:

```
dagconvert -d0 -o outfile.erf
```

To read from DAG card 0 and save to a file in pcap format:

```
dagconvert -d0 -T dag:pcap -o outfile.pcap
```

To convert a file from ERF format to pcap format:

```
dagconvert -T erf:pcap -i infile.erf -o outfile.pcap
```

To convert a file from pcap format to ERF format, ensuring the ERF records are 64-bit aligned (and therefore suitable for transmission using `dagflood`):

```
dagconvert -T pcap:erf -A 8 -i infile.pcap -o outfile64.erf
```

To capture from DAG Card 0 using a BPF filter:

```
dagconvert -d0 -o outfile.erf -b "host 192.168.0.1 and tcp port 80"
```

To capture from DAG card 0 using ERF filtering:

```
dagconvert -d0 -o outfile.erf -f "rx,a"
```

To capture from DAG card 0 to a series of files of size 128 MB:

```
dagconvert -d0 -o outfile.erf -r 128m
```

The first file created is labeled `outfile0000.erf`, once the file size reaches 128MB, a second file is created. The second is labeled `outfile0001.erf` etc.

Dagconvert

`dagconvert` is a software utility for converting data to various file formats. Supported formats are:

| File format | Description |
|-------------|---|
| dag | Read ERF records directly from DAG card (input only). |
| erf | ERF (Extensible Record Format) file (input and output). |
| atm | Legacy ATM files (input only). |
| eth | Legacy Ethernet files (input only). |
| pos | Legacy PoS files (input only). |
| null | Produces no input or output. |
| pcap | pcap(3) format file (input or output). |
| prt | ASCII text packet dump (output only). |

Data can be input from a file or captured from a DAG card. `dagconvert` can be used for converting data captured from a DAG card to pcap format. This allows the trace file to be used with tools that support the pcap file format. Also the reverse is possible, where data can be converted to ERF format for use in other dag utilities. The following is a list of options available in `dagconvert`.

| Options | Description | | | | | | | | |
|---|---|------------------|-------------------|--------------|-------------------|-------------|-------------------------|--------------------|--|
| -A NUM | Set the record alignment of the ERF to NUM bytes (ERF only). | | | | | | | | |
| -b EXPRESSION | Specify a tcpdump(1) style BPF expression to be applied to the packets. | | | | | | | | |
| -c 0 16 32 | Specify the size (in bits) of the frame checksum (FCS) (pcap(3) only). | | | | | | | | |
| -d DEVICE --device DEVICE | Use the DAG device referred to by DEVICE. Supported syntax includes 0, dag1, and /dev/dag3 to refer to DAG cards, and 0:2, dag1:1, and /dev/dag2:0 to refer to specific streams on cards. | | | | | | | | |
| -f FILTERS | A comma-delimited list of filters to be applied to the data. Supported filters are: <ul style="list-style-type: none"> rx Filter out rx errors (link layer). ds Filter out ds errors (framing). trunc Filter out truncated packets. a,b,c,d Filter on indicated port/interface(s). | | | | | | | | |
| -F | Select fixed length output (ERF only). | | | | | | | | |
| -G NUM | Set the GMT offset to NUM seconds (pcap(3) only). | | | | | | | | |
| -h, -?, --help, --usage | Display usage (help) information. | | | | | | | | |
| -i FILES | Name(s) of the input file(s). If more than one filename is given, the ERF records from the files will be merged in timestamp order to the output. | | | | | | | | |
| -o FILE | Name of the output file. | | | | | | | | |
| -r NUM | Rotate the output file after NUM bytes. Add k (kilobytes), m (megabytes), g (gigabytes) and t (terabytes) suffixes. | | | | | | | | |
| -s NUM | Set the snap length to NUM bytes. | | | | | | | | |
| -t NUM | Capture from the DAG card for NUM seconds. | | | | | | | | |
| -T atm dag erf eth pcap pos : erf pcap prt | Input and output types. See the DESCRIPTION section above for more information about the input and output types. | | | | | | | | |
| -v, --verbose | Increase output verbosity. | | | | | | | | |
| -V, --version | Select variable length output (ERF only). Display version information. | | | | | | | | |
| -y <DLT> | This sets the pcap data link type to be used for BPF filtering (-b) and for pcap output. Previously only one DLT was mapped to each ERF type. Supported DLT types (case insensitive): <table style="width: 100%; border: none;"> <tr> <td>EN10MB: Ethernet</td> <td>DOCSIS : Ethernet</td> </tr> <tr> <td>CHDLC : HDLC</td> <td>PPP_SERIAL : HDLC</td> </tr> <tr> <td>MTP2 : HDLC</td> <td>ATM_RFC1483 : ATM, AAL5</td> </tr> <tr> <td>SUNATM : ATM, AAL5</td> <td></td> </tr> </table> | EN10MB: Ethernet | DOCSIS : Ethernet | CHDLC : HDLC | PPP_SERIAL : HDLC | MTP2 : HDLC | ATM_RFC1483 : ATM, AAL5 | SUNATM : ATM, AAL5 | |
| EN10MB: Ethernet | DOCSIS : Ethernet | | | | | | | | |
| CHDLC : HDLC | PPP_SERIAL : HDLC | | | | | | | | |
| MTP2 : HDLC | ATM_RFC1483 : ATM, AAL5 | | | | | | | | |
| SUNATM : ATM, AAL5 | | | | | | | | | |

Note: Not all options are applicable to all DAG cards.

Using third party applications

Once the captured data is in Pcap format you can use third party applications to examine and process the data. The third party applications include:

- Wireshark /Tshark (formerly Ethereal /Tethereal)
- TCPDump
- Libpcap
- SNORT
- Winpcap, etc.

Note: Wireshark can also read ERF formatted data.

Synchronizing Clock Time

Overview

DAG cards have sophisticated time synchronization capabilities. This allows for high quality timestamps and optional synchronization to an external time standard.

The core of the DAG synchronization capability is known as the DAG Universal Clock Kit (DUCK).

A clock in each DAG card runs independently from the computer clock. The DAG card's clock is initialized using the computer clock, and then free-runs using a crystal oscillator.

Each DAG card's clock can vary relative to a computer clock, or other DAG cards.

DUCK Configuration

The DUCK (DAG Universal Clock Kit) is designed to reduce time variance between sets of DAG cards or between DAG cards and coordinated universal time [UTC].

You can obtain an accurate time reference by connecting an external clock to the DAG card using the time synchronization connector. Alternatively you can use the host computer's clock in software as a reference source without any additional hardware.

Each DAG card can also output a clock signal for use by other DAG cards.

Common Synchronization

The DAG card time synchronization connector supports a Pulse-Per-Second (PPS) input signal, using RS-422 signaling levels.

Common synchronization sources include GPS or CDMA (cellular telephone) time receivers.

Endace also provides the TDS 2 Time Distribution Server modules and TDS 6 expansion units that enable you to connect multiple DAG cards to a single GPS or CDMA unit.

For more information, please refer to the Endace website at <https://www.endace.com/support>, or the *EDM05-01 Time Distribution Server User Guide*.

Network Time Protocol

NTP (Network Time Protocol) can be used to synchronize a computer clock to a network based reference. When the NTP daemon starts, it exchanges packets with network time servers to establish the correct time. If the computer clock is significantly different, the NTP can adjust the computer clock in a single large 'step'. Over time, NTP adjusts the rate of computer clock to minimize the offset from its reference. It can take several days for NTP to fully synchronize the computer clock.

The DAG card clock is initialized from the computer's clock rather than from the NTP. Using NTP to synchronize the computer's clock ensures the DAG card clock remains accurate.

DAG cards can also be synchronized to external references such as GPS or to the computer clock directly. In both cases the computer clock time is loaded onto the DAG clock when the DAG card is started (`dagload`, `dagreset`, `dagrom -p`).

When clock synchronization is enabled, the DAG card time is compared to the computer time once per second, regardless of the synchronization source. If the times differ by more than 1 second, the DAG card clock is reloaded from the computer clock and synchronization is restarted. For this reason, the computer clock should be maintained with better than 1 second accuracy.

If the DAG card clock is synchronized to the computer clock, then small 'step' adjustments of the computer clock by the NTP daemon can cause the DAG driver to emit warning messages to the console and system log files if the adjustment exceeds the warning threshold. These messages are intended to allow the user to monitor the quality of the clock synchronization over time.

The best synchronization is achieved when the DAG card is synchronized to an external GPS reference clock, and the computer clock is synchronized to a local NTP server.

Timestamps

ERF files contain a hardware generated timestamp of each packet's arrival.

The format of this timestamp is a single little-endian 64-bit fixed point number, representing the number of seconds since midnight on the 1st January 1970.

The high 32-bits contain the integer number of seconds, while the lower 32-bits contain the binary fraction of the second. This allows an ultimate resolution of 2^{-32} seconds, or approximately 233 picoseconds.

Different DAG cards have different actual resolutions. This is accommodated by the lower most bits that are not active being set to zero. In this way the interpretation of the timestamp does not need to change when higher resolution clock hardware is available. The DAG 8.1X implements the 28 most significant bits which provides a time resolution of 3.7 nanoseconds.

The ERF timestamp allows you to find the difference between two timestamps using a single 64-bit subtraction. You do not need to check for overflows between the two halves of the structure as you would need to do when comparing Unix time structures.

Example

Below is example code showing how a 64-bit ERF timestamp (erfts) can be converted into a struct timeval representation (tv):

```
unsigned long long lts;
struct timeval tv;

lts = erfts;
tv.tv_sec = lts >> 32;
lts = ((lts & 0xffffffffULL) * 1000 * 1000);
lts += (lts & 0x80000000ULL) << 1;      /* rounding */
tv.tv_usec = lts >> 32;
if(tv.tv_usec >= 1000000) {
    tv.tv_usec -= 1000000;
    tv.tv_sec += 1;
}
```

Dagclock

The DUCK is very flexible and can be used with or without an external time reference. It can accept synchronization from one of several input sources and also be made to drive its synchronization output from one of several sources.

Synchronization settings are controlled by the `dagclock` utility.

Note: You should only run `dagclock` after you have loaded the appropriate FPGA images. If at any stage you reload the FPGA images you must rerun `dagclock` to restore the configuration.

Note: when you run `dagconfig -d0 default` the `dagclock` inputs and outputs are also reset to defaults.

A description of each argument is shown below:

| Option | Description |
|------------------------------|---|
| -d DEVICE --device DEVICE | Use the DAG device referred to by DEVICE. Supported syntax includes 0, dag1, and /dev/dag3 to refer to DAG cards. |
| -h, -? --help, --usage | Display the information on this page |
| -k --sync | Wait for DUCK synchronization before exiting |
| -K NUM | Set the synchronization timeout in seconds (default is 60 seconds) |
| -l NUM | Set the Health threshold in nanoseconds. (default is 596ns) |
| -v | Increase output verbosity |
| -V | Display version information |
| -x --clearstats | Clear clock statistics |

| Command | Description |
|----------|---|
| default | Set the <code>dagclock</code> input and output to RS422 in and none out. |
| none | Clears the input and output settings. |
| rs422in | Sets the <code>dagclock</code> input to RS422. |
| hostin | Sets the <code>dagclock</code> input to Host (unused) |
| overin | Sets the <code>dagclock</code> input to Internal input |
| auxin | Sets the <code>dagclock</code> input to Auxiliary input (unused) |
| rs422out | Sets the <code>dagclock</code> output to repeat the RS422 input signal |
| loop | Output the selected input |
| hostout | Sets the <code>dagclock</code> output to host (unused) |
| overout | Internal output (master card) |
| set | Sets the DAG card's clock to computer clock time and clears clock statistics. The DAG card takes approximately 20 to 30 seconds to re-synchronize. |
| reset | Full clock reset. Load time from computer, set RS422in, none out. Clears clock statistics. The DAG card takes approximately 20 to 30 seconds to re-synchronize. |

Note: By default, all DAG cards listen for synchronization signals on their RS-422 port, and do not output any signal to that port.

Dagclock Statistics reset

Statistics are reset to zero when the following occur:

- Loading a DAG driver
- Loading firmware
- `dagclock` with a `-x` option
- `dagclock` with a `set` or `reset` command.

Example

To view the default `dagclock` configuration:

```
dagclock -d0
```

The following is the output from DAG card that has its clock reference connected. The clock statistics have been reset since the card was last synchronized. **Note:** Values will differ for each DAG card type.

```
muxin    rs422
muxout   none
status   Synchronised Threshold 596ns Failures 0 Resyncs 0
error    Freq -30ppb Phase -60ns Worst Freq 75ppb Worst Phase 104ns
crystal  Actual 100000028Hz Synthesized 67108864Hz
input    Total 3765 Bad 0 Singles Missed 5 Longest Sequence Missed 1
start    Thu Apr 28 13:32:45 2007
host     Thu Apr 28 14:35:35 2007
dag      Thu Apr 28 14:35:35 2007
```

Note: For a description of the `dagclock` output see [Dagclock output explained](#) (page 36).

Dagclock output explained

Muxin

Lists the `dagclock` time input source for this DAG card. The options are `RS422in`, `Hostin`, `Overin` or `Auxin`.

Example

```
muxin rs422
```

Muxout

Lists the `dagclock` time output source for this DAG card. The options are `RS422out`, `Hostout`, `Overout` or `Loop`.

Example

```
muxout none
```

Status

This line reports on the status of the DAG card.

| Output | Description |
|--|---|
| Synchronised / Not synchronised | This indicates whether this DAG card is synchronized to the time source listed (<code>Muxin</code>). The DAG card becomes Not Synchronized when the absolute Phase error (page 36) is above the Threshold value for 10 consecutive seconds. |
| Threshold | This is the value above which the DAG card port is considered Not Synchronized . The Threshold value changes depending on the type of input time synchronization. The defaults are: <ul style="list-style-type: none"> • 596 for RS422 synchronization • 12000 for host synchronization (Unix) • 50000 for host synchronization (Windows) This value can be adjusted using the <code>dagclock -l</code> option. |
| Failures | This is a count of the number of times the DAG card has become Not Synchronized . |
| Resyncs | This is a count of the number of times the DAG card Phase error has exceeded 1 second. See Error (Dagclock) (page 36). If the DAG card is Not Synchronized for more than 10 seconds the DAG card automatically runs the following command to update the time on the DAG card: <pre>dagclock -d0 set</pre> Where "0" is the device number. |

Example

```
status Synchronised Threshold 596ns Failures 0 Resyncs 0
```

Error

This line reports on the synthesized frequency of the DAG card.

| Output | Description |
|-------------|---|
| Freq | An estimate of the synthesized frequency error over the last second in parts per billion. |
| Phase | The difference between the DAG card's clock and the reference clock at the last time pulse. |
| Worst Freq | Highest absolute value of the Frequency error since statistic collection began. Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35). |
| Worst Phase | Highest absolute value of the Phase error since statistic collection began. Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35) |

Example

```
error Freq -30ppb Phase -60ns Worst Freq 75ppb Worst Phase 104ns
```

Crystal

This line reports on the DAG card crystal oscillator.

| Output | Description |
|-------------|---|
| Actual | The DAG card's crystal frequency calculated based on the reference clock. |
| Synthesized | The target time stamping frequency. Different for each DAG card type. |

Example

```
crystal Actual 100000028Hz Synthesized 67108864Hz
```

Input

This line reports on the time pulses received by the DAG card.

| Output | Description |
|-------------------------|---|
| Total | The total number of time pulses received. Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35). |
| Bad | The number of time pulses that were rejected (considered <i>Bad</i>) by the DAG card. Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35). Time pulses are considered <i>Bad</i> if they were not received 1 second (approximately) after the last time pulse. These may be caused by noise. |
| Singles missed | The number of times a single time pulse failed to be received by the DAG card (i.e. a two second gap). Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35). |
| Longest Sequence Missed | This displays the longest time gap (in seconds) between a pair of time pulses. Reset to zero when statistics are reset, see Dagclock Statistics reset (page 35). |

Example

```
input Total 3765 Bad 0 Singles Missed 5 Longest Sequence Missed 1
```

Start / Host / DAG

| Output | Description |
|--------|---|
| Start | This is the time statistics collection started. See Dagclock Statistics reset (page 35) |
| Host | Current Host (computer) time. |
| DAG | The DAG card time at the last time pulse. If the DAG card has never been synchronized, the following displays: No active input - free running. |

Example

```
start Thu Apr 28 13:32:45 2007
host Thu Apr 28 14:35:35 2007
dag Thu Apr 28 14:35:35 2007
```

Card with Reference

Overview

To obtain the best timestamp accuracy you should connect the DAG card to an external clock reference, such as a GPS or CDMA time receiver.

To use an external clock reference source, the host computer's clock must be accurate to UTC to within one second. This is used to initialize the DUCK.

When the external time reference source is connected to the DAG card time synchronization connector, the DAG card automatically synchronizes to a valid signal.

Pulse Signal from External Source

The DAG time synchronization connector supports an RS-422 (PPS) signal from an external source. This is derived directly from an external reference source or distributed through the Endace TDS 2 (Time Distribution Server) module which allows two DAG cards to use a single receiver. It is also possible for more than two DAG cards to use a single receiver by "daisy-chaining" TDS-6 expansion modules to the TDS-2 module. Each TDS-6, module provides outputs for an additional 6 DAG cards.

Synchronize to an external source as follows:

```
dagclock -d0
```

Output:

```

muxin   rs422
muxout  none
status  Synchronised Threshold 596ns Failures 0 Resyncs 0
error   Freq 30ppb Phase -15ns Worst Freq 238ppb Worst Phase 326ns
crystal Actual 100000023Hz Synthesized 67108864Hz
input   Total 225 Bad 0 Singles Missed 1 Longest Sequence Missed 1
start   Thu Apr 28 14:55:20 2007
host    Thu Apr 28 14:59:06 2007
dag     Thu Apr 28 14:59:06 2007

```

Connecting the Time Distribution Server

You can connect the TDS 2 module to the DAG card using [DUCK crossover cable](#) (page 42) (**Note:** A 4-pin to RJ45 adapter may be required). The TDS may be located up to 600m (2000ft) from the DAG card depending upon the quality of the cable used, possible interference sources and other environmental factors. Please refer to the *EDM05-01 Time Distribution Server User Guide* for more information.

Caution:

Never connect a DAG card and/or the TDS 2 module to active Ethernet equipment or telephone equipment.

Testing the Signal

For Linux and FreeBSD, when a synchronization source is connected the driver outputs messages to the console log file `/var/log/messages`.

To test the signal is being received correctly and has the correct polarity use the `dagpps` tool as follows:

```
dagpps -d0
```

`dagpps` measures the input state many times over several seconds, displaying the polarity and length of input pulse.

Single Card No Reference

When a single DAG card is used with no external reference, the DAG card can be synchronized to the host computer clock. Most computer clocks are not very accurate by themselves, but the DUCK drifts smoothly at the same rate as the computer clock.

The synchronization achieved with this method is not as accurate as using an external reference source such as GPS.

The DUCK clock is synchronized to a computer clock by setting input synchronization selector to overflow as follows:

```
dagclock -d0 none overin
```

Output

```
muxin    overin
muxout   none
status   Synchronised Threshold 11921ns Failures 0 Resyncs 0
error    Freq 1836ppb Phase 605ns Worst Freq 147ppb Worst Phase 324ns
crystal  Actual 49999347Hz Synthesized 16777216Hz
input    Total 87039 Bad 0 Singles Missed 0 Longest Sequence Missed 0
start    Wed Apr 27 14:27:41 2007
host     Thu Apr 28 14:38:20 2007
dag      Thu Apr 28 14:38:20 2007
```

Two Cards No Reference

Overview

If you are using two DAG cards in a single host computer with no reference clock, you must synchronize the DAG cards using the same method if you wish to compare the timestamps between the two DAG cards. You may wish to do this for example if the two DAG cards monitor different directions of a single full-duplex link. You can synchronize the DAG cards in two ways:

- One DAG card can be a clock master for the second. This is useful if you want both DAG cards to be accurately synchronized with each other, but not so for absolute time of packet time-stamps, or
- One DAG card can synchronize to the host and also act as a master for the second DAG card.

Synchronizing with Each Other

Although the master DAG card's clock drifts against UTC, the DAG cards will be locked together. This is achieved by connecting the time synchronization connectors of both DAG cards using a [DUCK crossover cable](#) (page 42) (**Note:** A 4-pin to RJ45 Adapter may be required).

Configure one of the DAG cards as the master so that the other defaults to being a slave as follows:

```
dagclock -d0 none overout
```

Output:

```
muxin   none
muxout  over
status  Not Synchronised Threshold 596ns Failures 0 Resyncs 0
error   Freq 0ppb Phase 0ns Worst Freq 213ppb Worst Phase 251ns
crystal Actual 100000000Hz Synthesized 67108864Hz
input   Total 0 Bad 0 Singles Missed 0 Longest Sequence Missed 0
start   Thu Apr 28 14:48:34 2007
host    Thu Apr 28 14:48:34 2007
dag     No active input - Free running
```

Note: The slave DAG card configuration is not shown as the default configuration will work.

Synchronizing with Host

To prevent the DAG card clock time-stamps drifting against UTC, the master DAG card can be synchronized to the host computer's clock which in turn utilizes NTP. This provides a master signal to the slave DAG card.

Configure one DAG card to synchronize to the computer clock and output a RS-422 synchronization signal to the second DAG card as follows:

```
dagclock -d0 none overin overout
```

Output:

```

muxin   over
muxout  over
status  Synchronised Threshold 11921ns Failures 0 Resyncs 0
error   Freq -691ppb Phase -394ns Worst Freq 147ppb Worst Phase 424ns
crystal Actual 49999354Hz Synthesized 16777216Hz
input   Total 87464 Bad 0 Singles Missed 0 Longest Sequence Missed 0
start   Wed Apr 27 14:27:41 2007
host    Thu Apr 28 14:59:14 2007
dag     Thu Apr 28 14:59:14 2007

```

Note: The slave DAG card configuration is not shown, the default configuration is sufficient.

Connector Pin-outs


Overview

DAG cards have an 8-pin RJ45 connector for time synchronization. The connector has two bi-directional RS422 differential circuits, A and B. The Pulse Per Second (PPS) signal is carried on circuit A, and the SERIAL packet is connected to the B circuit.

Pin Assignments

The 8-pin RJ45 connector pin assignments and plugs and sockets are shown below:

| | |
|----|-------------|
| 1. | Out PPS+ |
| 2. | Out PPS- |
| 3. | In PPS+ |
| 4. | In SERIAL+ |
| 5. | In SERIAL- |
| 6. | In PPS- |
| 7. | Out SERIAL+ |
| 8. | Out SERIAL- |

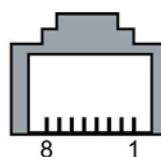

RJ45 socket

Normally, you connect the GPS input to the PPS (A) channel input (pins 3 and 6).

The DAG card can also output a synchronization pulse for use when synchronizing two DAG cards (i.e. without a GPS input). The synchronization pulse is output on the Out PPS channel (pins 1 and 2).

To connect two DAG cards, use a [DUCK crossover cable](#) (page 42) to connect the two time synchronization sockets.

DUCK Crossover cable

To synchronize two DAG cards together use a cable with RJ45 plugs and the following wiring.

| | | | |
|------------|---|---|------------|
| TX PPS+ | 1 | 3 | RX PPS+ |
| TX PPS- | 2 | 6 | RX PPS- |
| RX PPS+ | 3 | 1 | TX PPS+ |
| RX SERIAL+ | 4 | 7 | TX SERIAL+ |
| RX SERIAL- | 5 | 8 | TX SERIAL- |
| RX PPS- | 6 | 2 | TX PPS- |
| TX SERIAL+ | 7 | 4 | RX SERIAL+ |
| TX SERIAL- | 8 | 5 | RX SERIAL- |

Note: This wiring is the same as an Ethernet crossover cable (Gigabit crossover, All four pairs crossed).

Overview

The DAG Card produces trace files in its own native format called ERF (Extensible Record Format). The ERF type depends upon the type of connection you are using to capture data.

The DAG 8.1X supports the following ERF Types:

| ERF Type | Description |
|----------|---|
| 2 | TYPE_ETH Ethernet Variable Length Record |


The ERF file contains a series of ERF records with each record describing one packet. ERF files consists only of ERF records, there is no file header or trailer. This allows for simple concatenation and splitting of files to be performed on ERF record boundaries.

For information on other ERF types, please refer to *EDM11-01 ERF types*.

Generic ERF Header

All ERF records share some common fields. Timestamps are in little-endian (Pentium® native) byte order. All other fields are in big-endian (network) byte order. All payload data is captured as a byte stream in network order, no byte or re-ordering is applied.

The generic ERF header is shown below:

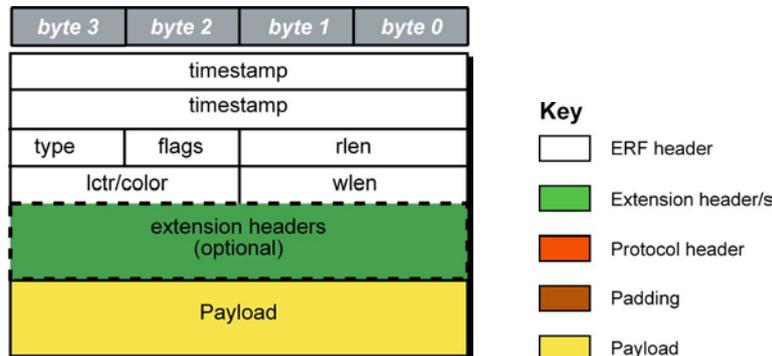

The fields are described below:

| | | |
|-----------|--|---|
| timestamp | | The time of arrival of the cell, an ERF 64-bit timestamp. |
| type | Bit 7 | Extension header present. |
| | Bit 6:0 | Extension header type. See table below: |
| flags | This byte is divided into several fields as follows: | |
| | Bits | Description |
| | 1-0: | Binary enumeration of capture interface: 11 Interface 3 or D 10 Interface 2 or C 01 Interface 1 or B 00 Interface 0 or A Cards with more than four interfaces typically use Multichannel ERF types (type 5 to 9, 12 and 17) which provide a separate larger interface field. |
| | 2: | Varying length record. When set, packets shorter than the snap length are not padded and rlen resembles wlen. When clear, longer packets are snapped off at snap length and shorter packets are padded up to the snap length. rlen resembles snap length. Setting novarlen and slen greater than 256 bytes is wasteful of bandwidth |
| | 3: | Truncated record - insufficient buffer space. <ul style="list-style-type: none"> wlen is still correct for the packet on the wire. rlen is still correct for the resulting record. But, rlen is shorter than expected from snap length or wlen values. Note: truncation is depreciated and this bit is unlikely to be set in an ERF record. |
| | 4: | RX error. An error in the received data. Present on the wire |
| | 5: | DS error. An internal error generated inside the card annotator. Not present on the wire. |
| | 6: | Reserved |
| 7: | Reserved | |
| rlen | | Record length in bytes. Total length of the record transferred over the PCIe bus to storage. The timestamp of the next ERF record starts exactly rlen bytes after the start of the timestamp of the current ERF record. |
| lctr | | Depending upon the ERF type this 16 bit field is either a loss counter or color field. The loss counter records the number of packets lost between the DAG card and the stream buffer due to overloading on the PCIe bus. The loss is recorded between the current record and the previous record captured on the same stream/interface. The color field is explained under the appropriate type details. |

| | | |
|-------------------|--|---|
| wlen | | Wire length. Packet length "on the wire" including some protocol overhead. The exact interpretation of this quantity depends on physical medium. This may contain padding. |
| extension headers | | Extension headers in an ERF record allow extra data relating to each packet to be transported to the host. Extension header/s are present if bit 7 of the type field is '1'. If bit 7 is '0', no extension headers are present (ensures backwards compatibility). Note: There can be more than one Extension header attached to a ERF record. |
| Payload | | Payload is the actual data in the record. It can be calculated by either : <ul style="list-style-type: none"> • Payload = rlen - ERF header - Extension headers (optional) - Protocol header - Padding |

Extension header types


| Number | Type | Description |
|--------|-------------------------|---|
| 0: | TYPE_LEGACY | Old style record |
| 1: | TYPE_HDLC_POS | Packet over SONET / SDH frames, using either PPP or CISCO HDLC framing. |
| 2: | TYPE_ETH | Ethernet |
| 3: | TYPE_ATM | ATM cell |
| 4: | TYPE_AAL5 | reassembled AAL5 frame |
| 5: | TYPE_MC_HDLC | Multi-channel HDLC frame |
| 6: | TYPE_MC_RAW | Multi-channel Raw time slot link data |
| 7: | TYPE_MC_ATM | Multi-channel ATM Cell |
| 8: | TYPE_MC_RAW_CHANNEL | Multi-channel Raw link data |
| 9: | TYPE_MC_AAL5 | Multi-channel AAL5 frame |
| 10: | TYPE_COLOR_HDLC_POS | HDLC format like TYPE_HDLC_POS, but with the LCNTR field reassigned as COLOR |
| 11: | TYPE_COLOR_ETH | Ethernet format like TYPE_ETH, but with the LCNTR field reassigned as COLOR |
| 12: | TYPE_MC_AAL2 | Multi-channel AAL2 frame |
| 13: | TYPE_IP_COUNTER | IP Counter ERF Record |
| 14: | TYPE_TCP_FLOW_COUNTER | TCP Flow Counter ERF Record |
| 15: | TYPE_DSM_COLOR_HDLC_POS | HDLC format like TYPE_HDLC_POS, but with the LCNTR field reassigned as DSM COLOR |
| 16: | TYPE_DSM_COLOR_ETH | Ethernet format like TYPE_ETH, but with the LCNTR field reassigned as DSM COLOR |
| 17: | TYPE_COLOR_MC_HDLC_POS | Multi-channel HDLC like TYPE_MC_HDLC, but with the LCNTR field reassigned as COLOUR |
| 18: | TYPE_AAL2 | Reassembled AAL2 Frame Record |
| 19: | TYPE_COLOR_HASH_POS | Colored PoS HDLC record with Hash load balancing |
| 20: | TYPE_COLOR_HASH_ETH | Colored Ethernet variable length record with Hash load balancing |
| 21: | TYPE_INFIBAND | Infiniband Variable Length Record |
| 22: | TYPE_IPV4 | IPV4 Variable Length Record |
| 23: | TYPE_IPV6 | IPV6 Variable Length Record |
| 24: | TYPE_RAW_LINK | Raw link data, typically SONET or SDH Frame |
| 32-47: | - | Reserved for CoProcess Development Kit (CDK) Users and Internal use |
| 48: | TYPE_PAD | Pad Record type |

Note: The Ethernet frame begins immediately after the pad byte so that the layer 3 (IP) header is 32-bit aligned.

ERF 2. TYPE_ETH

| | | |
|-------------------|--|--|
| Type | Bit 7 | 1 = Extension header present. See Extension Headers (page 47). |
| | Bits 6:0 | Type 2 |
| Short description | TYPE_ETH | |
| Long description | Type 2 Ethernet Record | |
| Use | This record format is for Ethernet [802.3] data links. | |

The *TYPE_ETH* record is shown below:

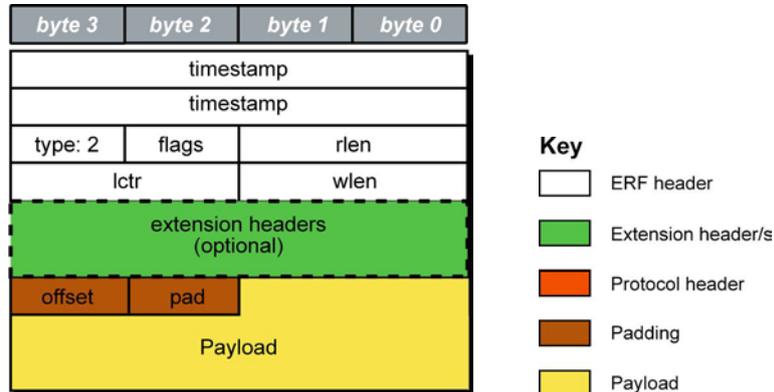

The following is a description of the *TYPE_ETH* record format:

| Field | Description |
|------------------------------|---|
| Offset (1 byte) | Number of bytes not captured from start of frame. Typically used to skip link layer headers when not required in order to save bandwidth and space. Note: This field is currently not implemented, contents should be disregarded. |
| Pad (1 byte) | The Ethernet frame begins immediately after the pad byte so that the layer 3 [IP] header is 32-bit aligned. This is typically used to skip link layer headers when they are not required in order to save bandwidth and space. |
| Payload (bytes of record) | Payload = rlen - ERF header (16 bytes) - Extension headers (optional) - Padding (2 bytes) |


Extension Headers (EH)

Introduction


The addition of an Extension Header into the ERF record allows extra data relating to the packet to be transported to the host. The extension header allows certain features to be added independently of ERF types, for example, features shared by different ERF records do not have to be implemented separately. This results in automatic support across ERF types.

Bit 7 of the ERF type field is used to indicate that Extension Header's are present. If set to '1' Extension Headers are present. The Extension Header type field indicates the type and format of the Extension Header. It also indicates whether further Extension Headers are present. If bit 7 of the Extension Header is set to '1' further Extension Headers exist in the record. The Extension Headers are 8 bytes in length.

The following diagram shows presence of an Extension Header in addition to the ERF record.

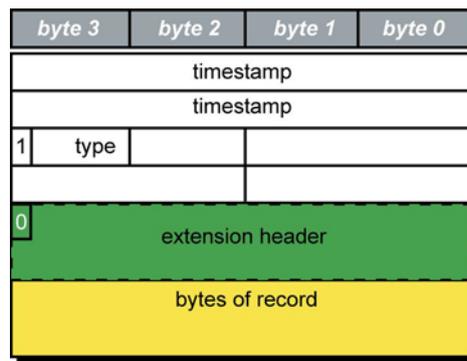

The following diagram shows presence of two Extension Headers with Bit 7 of the first Extension Header set to '1'.

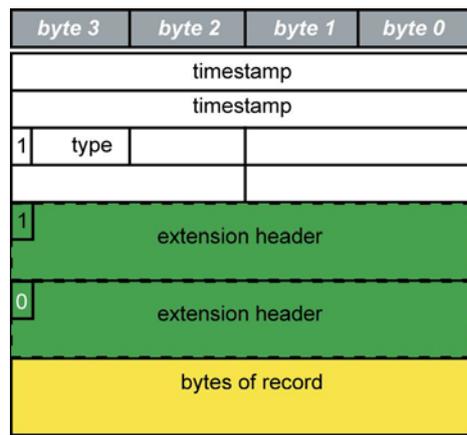

Reporting Problems

If you have problems with a DAG 8.1X card or Endace supplied software which you are unable to resolve, please contact Endace Customer Support at support@endace.com.

Supplying as much information as possible enables Endace Customer Support to be more effective in their response to you. The exact information available to you for troubleshooting and analysis may be limited by nature of the problem.

The following items may assist in a quick resolution:

- DAG 8.1X card[s] model and serial number.
- Host computer type and configuration.
- Host computer operating system version.
- DAG software version package in use.
- Any compiler errors or warnings when building DAG driver or tools.
- For Linux and FreeBSD, messages generated when DAG device driver is loaded. These can be collected from command `dmesg`, or from log file `/var/log/syslog`.
- Output of `daginf`.
- Firmware versions from `dagrom -x`.
- Physical layer status reported by: `dagconfig`
- Link statistics reported by: `dagconfig -si`
- Statistics either (depending on the DAG card):
 - Extended statistics reported by: `dagconfig -ei`
 - Universal statistics reported by: `dagconfig -ui`
- Network link configuration from the router where available.
- Contents of any scripts in use.
- Complete output of session where error occurred including any error messages from DAG tools. The `typescript` Unix utility may be useful for recording this information.
- A small section of captured packet trace illustrating the problem.
- If you have just rebooted and the system can not see any DAG cards, you need to load the DAG drivers. Run `dagload`.

Version History

The version history for this user guide is shown below:

| Version | Date | Reason |
|---------|---------------|--|
| 1 | December 2007 | First release - based on 8.1SX |
| 2 | December 2007 | Corrections to optical modules. Addition of FCL master information. |
| 3 | June 2008 | Added card features and firmware image list. Updated tokens list. Added Universal counters. Added ERF Extension header information. |
| 4 | August 2008 | Released. Removed reference to DSM image in Programming the FPGA section. Currently the 8.1X does not support DSM. Updated Optical module information. |
| 5 | November 2008 | Updated Buffer_size and mem dagconfig tokens and associated cross references. Updated front matter. Update dagconfig options table. Added new dagrom options. Supported OS information now in release notes. Added card description to the overview. |

| Status | Description |
|-------------|---|
| Preliminary | The products described in this technical document are in development and have yet to complete final production quality assurance. |
| Released | The products described in this technical document have completed development and final production quality assurance. |

